

IMPORTING S100 PRODUCTS INTO SEALL

VERSION	DATE	PURPOSE
1.0	28 / 04 / 2026	To enable the user to import and display S100 trial data provided by UKHO & SHOM

STEPS TO FOLLOW

1. Unzip S100 Data Folders provided by UKHO/SHOM
NB: Some folders have zipped folders within folders











All S-100 trial data sets > All S-100 trial data sets >

Search All S-100 trial data se

Sort


View

...

<div><input type="checkbox"/></div> Name	Date modified	Type	Size
Last week			
<div> S-101</div>	20/04/2026 11:22	Compressed (zipp...	18,280 KB
<div> S-102</div>	20/04/2026 11:22	Compressed (zipp...	42,342 KB
<div> S-104</div>	20/04/2026 11:22	Compressed (zipp...	10,505 KB
<div> S-111</div>	20/04/2026 11:22	Compressed (zipp...	34,296 KB
<div> S-124</div>	20/04/2026 11:22	Compressed (zipp...	12 KB
<div> S-102</div>	20/04/2026 13:32	File folder	
<div> S-111</div>	20/04/2026 13:32	File folder	
<div> S-124</div>	20/04/2026 13:32	File folder	
<div> S-104</div>	20/04/2026 11:29	File folder	
<div> S-101</div>	20/04/2026 11:24	File folder	

2. Save to a location that will be easy to find, such as your C:\Drive or a designated USB

3. Navigate to Page 1 of Chart Management and click the three dots to search your available media



Data Management


Import Data

Select type of import:


Select the location of your files, then click on Start to begin the import.

Import History

Edit	Product	Status	Year	Week	Reference	La
------	---------	--------	------	------	-----------	----




PLAN




MONIT

CHT
MGMT




4. Locate your S100 Trial Data folder and drill down into the data set you wish to import until you locate CATALOG.XML file, click OPEN then click START

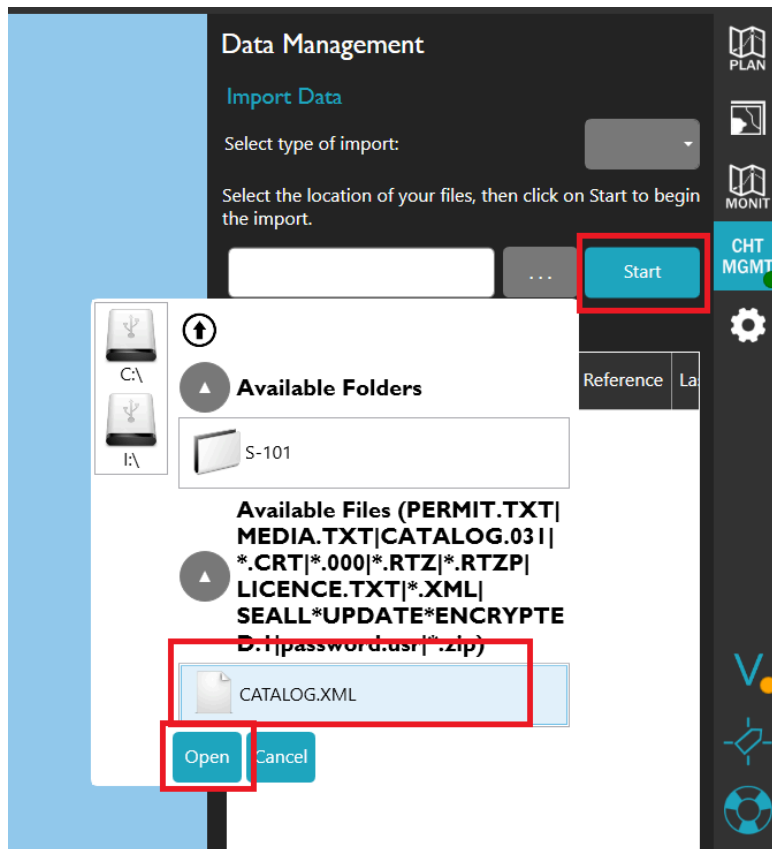

5. Repeat this step for all products you wish to review

6. Data Sets can be loaded from Page 2 of Settings

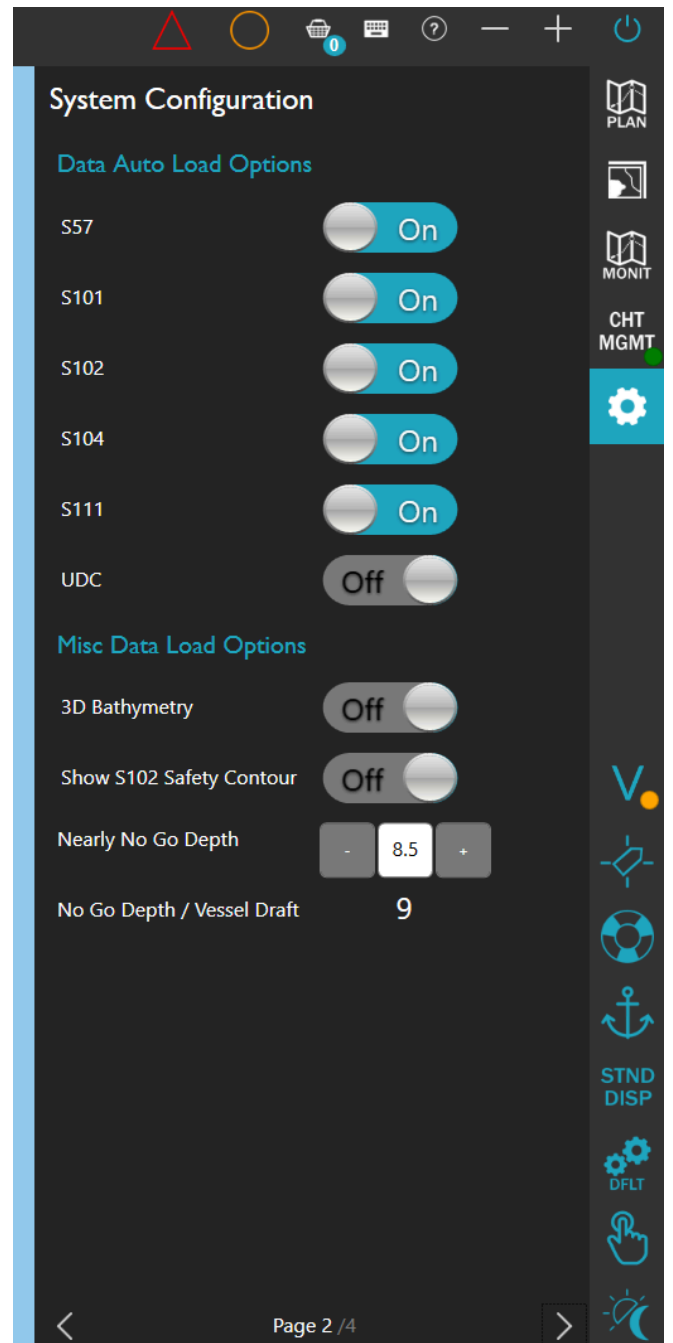

7. For any assistance or questions please contact support@seallecdis.com